



replacement parts industries, inc.

CALL 800-221-9723 or 818-882-8611 • FAX 818-882-7028

E-MAIL: techsupport@rpiparts.com • WEBSITE: www.rpiparts.com

"The Alternate Source™"

## ADK252

### WATER COOLANT RELAY KIT INSTALLATION INSTRUCTIONS

1. Turn off the master switch and bleed the system of any trapped air.
2. Remove the Water Coolant Relay from the delivery unit.
3. Completely disassemble the Water Coolant Relay Valve.
4. Inspect all parts and replace parts included in kit as per diagram. *(Parts included in Kit are shown in bold.)*
5. Be sure to clean and lubricate the piston and o-rings, using High Temp Lubricant (RPI Part #RPL090) included in kit, prior to reassembly.
6. Refer to the diagram to make sure all parts are properly located.
7. Reinstall Water Coolant Relay and check function.

